 


Blocked fifth wheels

BLHAWB blocked air slide fifth wheels

Part Number	Mounted Height	Description
BLHAWB8PT	8-3/4"	Blocked H5092 top plate with BLHAWB bracket
BLHAWB9PT	9-3/4"	Blocked H5092 top plate with BLHAWB bracket
BLHAWB10PT	10-3/4"	Blocked H5092 top plate with BLHAWB bracke


Note: Slide rail is not included.

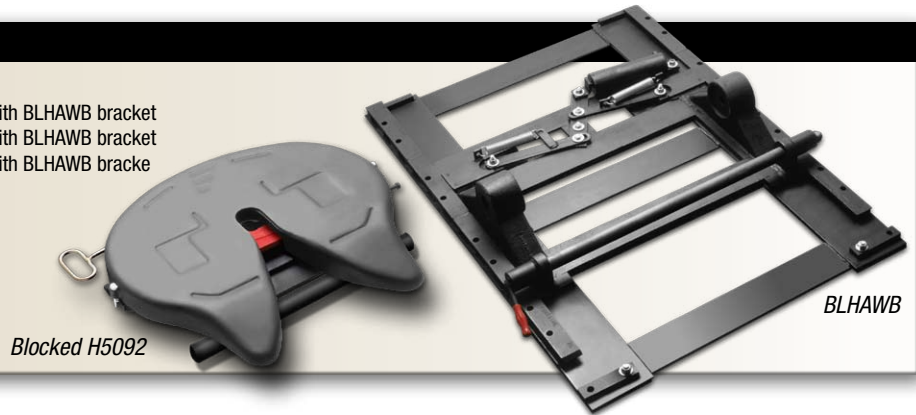

BLHMWS blocked manual slide fifth wheels


Part Number	Mounted Height	Description
BLHMWS8PT	8-3/4"	Blocked H5092 top plate with BLHMWS bracket
BLHMWS9PT	9-3/4"	Blocked H5092 top plate with BLHMWS bracket
BLHMWS10PT	10-3/4"	Blocked H5092 top plate with BLHMWS bracket

 Note: Slide rail is not included.

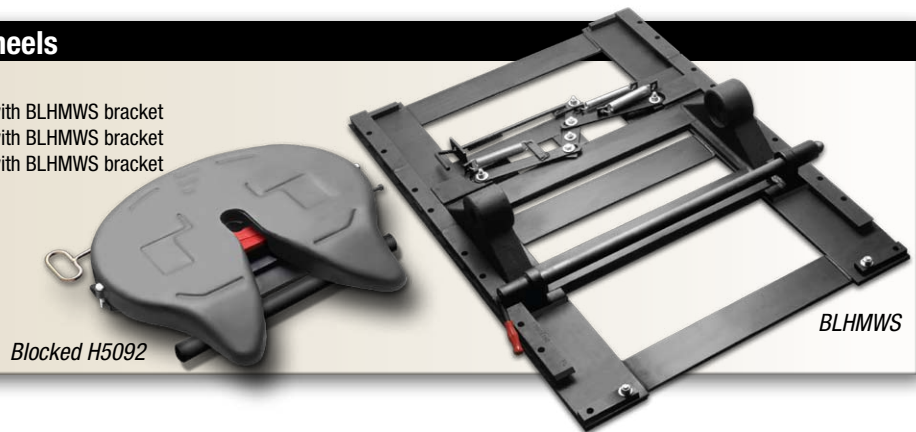

BLHPSA blocked plate mount fifth wheels

Part Number	Mounted Height	Description
BLHPSA8375	8-3/8"	Blocked H5092 top plate with BLHPSA bracket
BLHPSA9375	9-3/8"	Blocked H5092 top plate with BLHPSA bracket
BLHPSA10375	10-3/8"	Blocked H5092 top plate with BLHPSA bracket

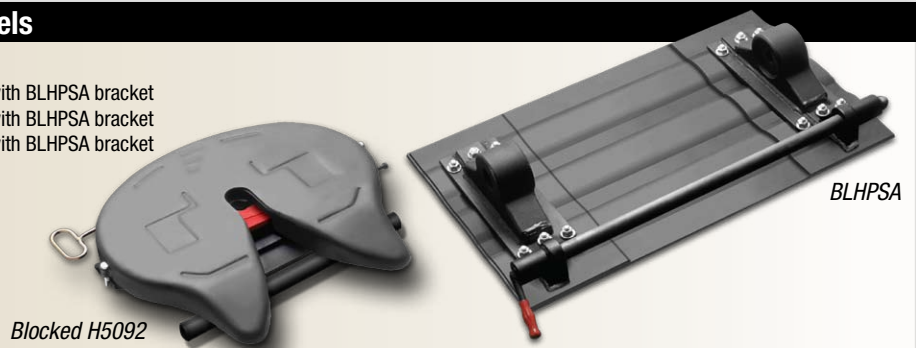 

Kits and parts for blocked fifth wheels

Blocking kit (For AWB and MWS brackets)

Blocking kit for H5092 top plate and BLHAWB bracket. KIT-BLK-SLD

Note: The bracket height must be 8-3/4". Kit must be installed by a certified welder.
See TB-030 for installation instructions.

Replacement bar (For AWB, MWS and PSA brackets)

Replacement bar for blocked H5092 top plate. BAR-396-BK
(For BLHAWB, BLHMWS and BLHPSA brackets)

